



SPRING WASHER

Ensure the quality of products, the production of excellent quality of finished products













ACCESSORIES









PRODUCT DISPLAY



Belt Wire Drawing Machine

Die for Belt Wire Drawing



Coil machine


Coil Collection Machine



Cutting Machine

Washer Tempering Furnace

MACHINE MAINTENANCE

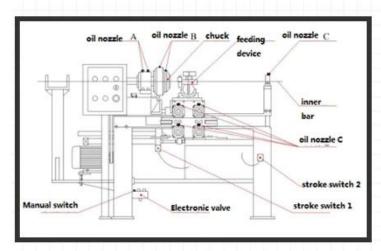

Coil machine daily maintenance:

- 1) Jaw chuck washes it once a month,add high temperature yellow oil (300°C). Yellow oil see the photo
- 2) Jaw chuck need to add high temperature yellow oil (300°C) every week.
- 3) every day clean the machine.



Coil machine



Leader wire




Yellow oil

Cutting machine Maintenance:

- 1.slide,each support part,wheel,rod,chains,copper bush add oil two time per day(morning and noon.)
- 2.Each day clean the machine when off duty.



cutting machine

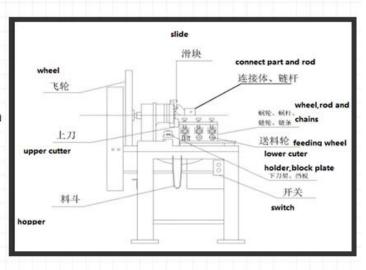







3-5mm Cutting Machine



10-12mm Cutting Machine



24-30mm Cutting Machine



14-16mm Cutting Machine



Belt Wire Drawing Machine



160mm 200mm Die for Belt Wire Drawing



Belt Wire Drawing Machine



3-6mm Rolling up Machine



12-16mm 18-22mm Rolling up Machine



37kw Washer Tempering Furnace



3-5mm 6mm 8-10mm Coil Collection Machine



12-16mm、18-22mm、 24-30mm Coil Collection Machine

ABROAD CUSTOMERS







