

FEATURES AT A GLANCE

Spring washer machine

Spring washer machine
includes three parts:






1 drawing the round wire
to belt wire machine (if
raw material is belt wire,
pls omit this step).



2 rolling up machine / coil machine.

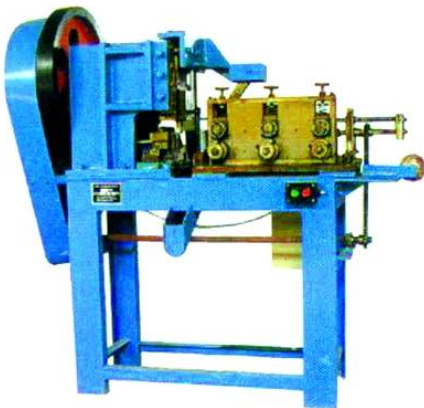


3 cutting machine

Products Show





Products Description

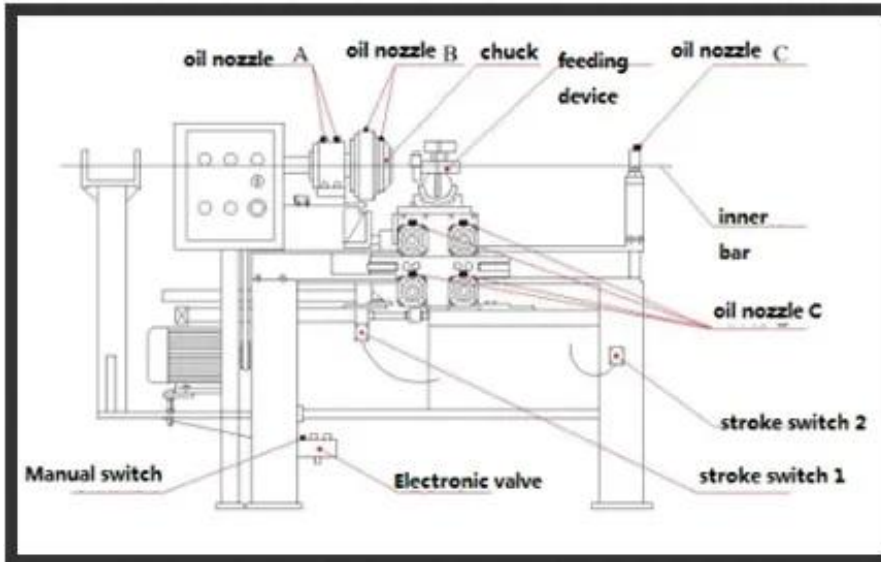

Coil machine daily maintenance:

- 1) Jaw chuck washes it once a month, add high temperature yellow oil (300°C). Yellow oil see the photo 2)Jaw chuck need to add high temperature yellow oil (300°C) every week. 3) every day clean the machine.




Coil machine



Leader wire



Yellow oil

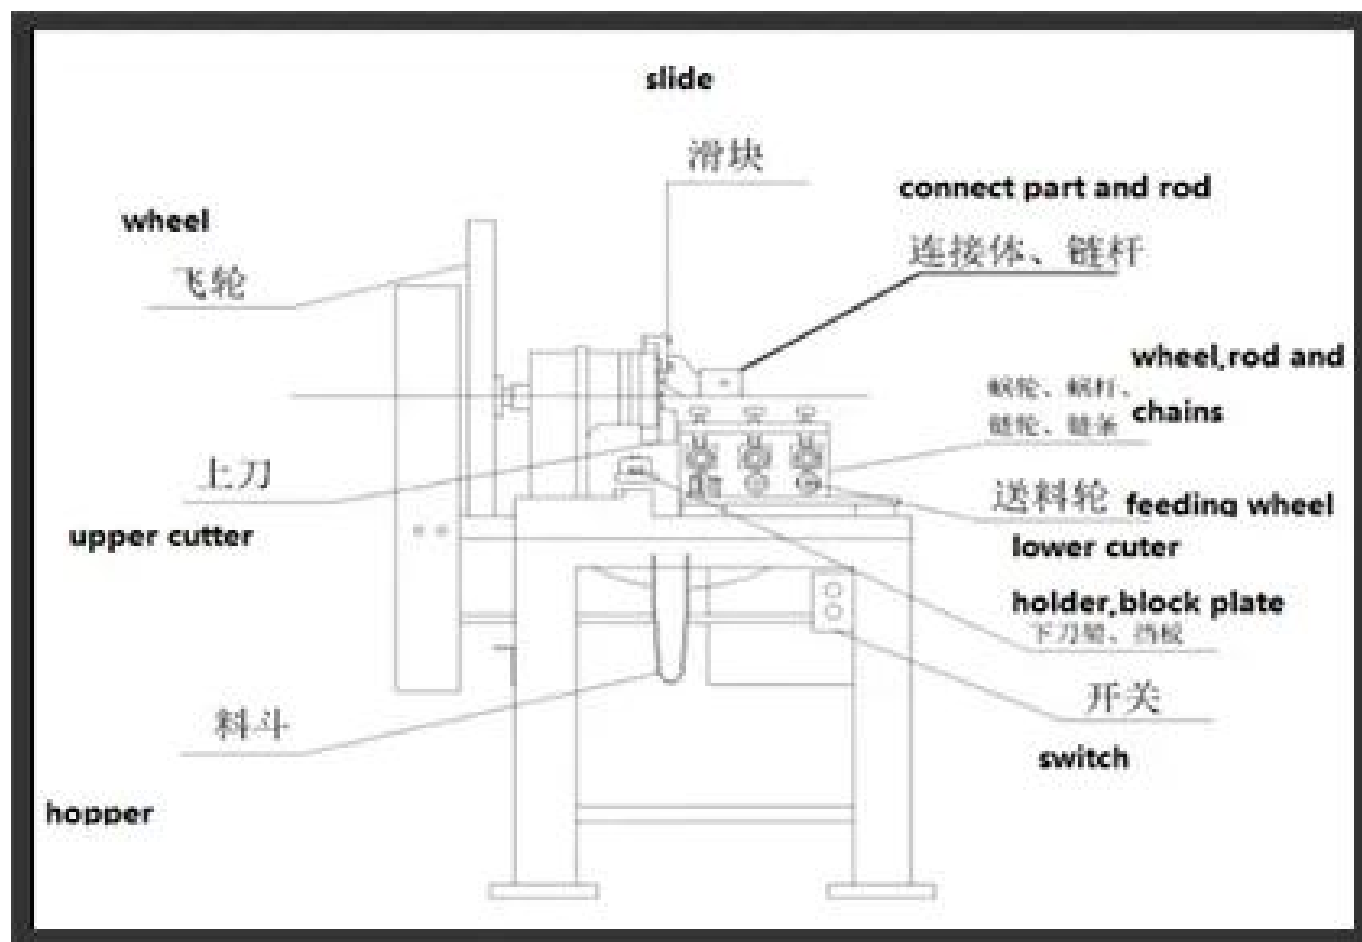

C